




Arc 3

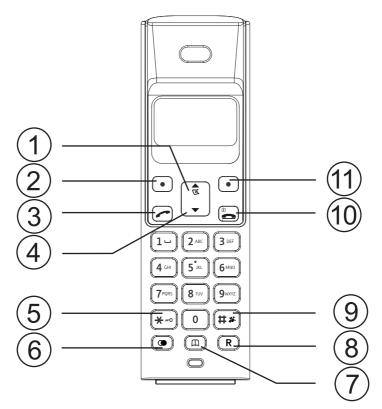

### **English**

- 1 Up / missed call
- 2 Left menu button/OK
- 3 Talk button
- 4 Down
- 5 

   and keypad lock
- 6 Redial

### **Français**

- Touche défilement / Journal des appelants
- 2 Touche menu / OK
- 3 Touche de prise de ligne
- 4 Touche défilement
- 5 **x** et Verrouillage du clavier

- 7 Phone book
- 8 Recall button (PBX features)
- 9 **m** and ring signal off/on
- 10 End call and on / off button
- 11 Right menu button/Back/Internal call
- 6 Touche Bis
- 7 Répertoire
- 8 Touche R
- 9 Touche **t** et Sonnerie Off/On
- 10 Touche de raccroché et on/off
- 11 Touche menu / Retour / Intercom

#### Connection

- 1. Connect mains adapter/phone cable to wall sockets.
- 2. Insert batteries (1.2V NiMH AAA) in accordance with the markings.
- **3.** Charge with the keypad facing outwards (24 hours the first time).
- **4.** Press (left menu button).
- 5. Scroll ▲/▼ to HS SETTINGS.
- 6. Press **OK** (left menu button).
- 7. Scroll to LANGUAGE. Press OK.
- 8. Scroll to desired setting. Press OK.
- **9.** Press or several times to exit the menu screens.

#### Date/Time

- **10.**Press (left menu button).
- 11. Scroll ▲/▼ to HS SETTINGS. Press OK.
- 12. Scroll to HS DISPLAY. Press OK.
- 13. Scroll to TIME. Press OK.
- 14. Scroll to DATE & TIME. Press OK.
- **15.**Scroll to **SET TIME**. Press **OK**.
- **16.**Enter time of day (HH-MM). Press **OK**.
- 17. Scroll to SET DATE. Press OK.
- 18. Enter date (DD MM YY). Press OK.
- 19. Press or several times to exit the menu screens.

### **Battery**

When the batteries are relatively new and fully-charged (10 hours) they will last for approx. 100 hours' standby time or approx. 10 hours' call time. These times apply at normal room temperature. Full battery capacity will not be reached until the batteries have been charged 4-5 times. It is not possible to overcharge or damage the batteries by charging them for "too long". It may take up to 5 minutes charging before display wakes up, if batteries are totally empty.

### Please note!

When the battery is low or when there is too great a distance to the base unit the telephone will be unable to connect to a line. Do not place the base unit close to other electrical equipment, in direct sunlight or other strong heat sources! This is to minimize the risk of any interference. It is normal for the device to become warm during charging and this is not dangerous. Use only original batteries. The guarantee does not cover any damage caused by using the wrong batteries.

### **Battery LED**

When the batteries are running low, will flash and a warning tone will be heard when a call is in progress. Please note that the complete battery indicator in the display will flash as long as the handset is charging, and when the battery is fully charged only the inner segment will flash.

### **Paging**

The handset will ring when 

(on the base unit) is pressed. The signal will stop automatically after a while or if the button on the handset or the 

button on the base unit are pressed.

### Range

The telephone's range depends on whether or not the radio waves carrying the call are restricted by obstacles in their path, and is usually between 50 and 300 metres. Coverage can be improved by turning one's head so that the handset is aligned with the base unit. Sound quality declines as the limit is reached until the call is finally interrupted.

The T symbol is shown when the phone is within range

### Making a call

1. Enter the required number. Delete if necessary with right menu button **C**.

and goes out/flashes when it is out of range.

2. Press ro make the call. Press to end the call.

### Receiving a call

- 1. Wait for the handset to ring.
- 2. Press to answer. Press to end the call.

#### Volume control

The volume may be adjusted during a call with  $\triangle/\nabla$ .

#### Redial

Press . Scroll among the 5 most recently dialled numbers with . Press .

#### **Mute button**

The microphone can be switched off/on during a call with **C** (right menu button).

## Temporary silent mode

When someone calls, you can press  $\boldsymbol{C}$  (right menu button) to turn off the handset ring signal.

#### **Phonebook**

You can save 20 numbers/names. If you subscribe to a caller ID service, the name allocated to the caller in the phonebook will be shown for incoming calls. It is possible to choose between various ringers for the numbers saved in the Phonebook (only functions if you subscribe to a caller ID service).

#### Letters

Each number key has been allocated certain letters. The phonebook is arranged according to the order of the buttons, which is not the same for all languages.

1 .....[Space]

#### Save name/number in handset

- 1. Press Q. Press
- 2. Scroll to ADD. Press OK.
- Press equivalent digit key several times for desired name. Press OK.
- Enter the telephone number, including the area code Delete if necessary with right menu button C. Press OK.
- **5.** Scroll to required ringer. Press **OK**.

### Managing the phonebook

- 2. Press to make a call or press for various options.

### Incoming numbers/Caller ID

The display shows you who is calling and the 10 most recent missed calls. **NEW CALLS** will be shown in standby mode and  $\star$  in the list indicates a missed call. This function requires a subscription from your service provider!

### Retrieving and dialling

- **1.** Press ▲. Scroll to the desired entry with ▼.
- 2. Press to call or press for various options ( ) = back).

### Caller identification messages

In addition to number display, the following messages will be shown occasionally:

OUT OF AREA Unknown number, e.g. international call.

WITHHELD Information about the number is blocked.

Number cannot be shown.

MSG indication from your network operator\*

\*Delete: Press A and then hold down 4.

#### **Handset settings**

- 1. Press . Scroll to HS SETTINGS. Press OK.
- 2. Scroll to desired function e.g. LANGUAGE. Press OK.
- **3.** Scroll to desired setting. Press **OK**.

ALARM When the alarm is activated will

be shown in standby mode. When the alarm goes off, a signal will be heard for 45 seconds. The signal can be turned off with any button. If

**SNOOZE** is activated the alarm will go off again approx. 7 minutes later. Turn the alarm off permanently via the menu or by holding down for a few seconds. The volume is determined by the set ringer level.

**RING SETUP** The handset's ringer signal.

**INT/EXT**=internal/external melody. **RING VOLUME**=set the ringer level.

Melodies 2-5 can continue for up to 8 seconds if the call is answered in another phone.

**TONE SETUP LANGUAGE**Key tone, low battery tone, out of range.
This is explained in the *Connection* 

section.

RENAME HS
HS DISPLAY
AUTO ANSWER

The text shown in standby mode.
Show name or time in standby mode.
The call is answered when the handset is lifted from the base

**DATE & TIME** Setting the date/time.

#### **Base settings**

System PIN is 0000 on delivery.

- 1. Press . Scroll to BS SETTINGS. Press OK.
- **2.** Scroll to desired function. Press **OK**.
- **3.** Enter the desired setting. Press **OK**.

DELETE HS
DIAL MODE
FLASH TIME

To deregister another handset. Must be in tone in most countries.

**LONG** = New Zealand.

**MEDIUM** = France/Portugal. **SHORT** = others incl. UK/AUS.

CHANGE PIN The code (e.g. 0000) can be changed.

### Expanded system (+1)

The call number for internal calls will be shown in the display in standby mode. The base unit should be positioned centrally so that the coverage area is roughly equal for all handsets.

#### Intercom / internal call

- 1. Press = (right menu button).
- 2. If using more than 2 handsets: Enter call number 1-6 for the desired handset or press 9 for all.

A tone will be heard if an external call comes in while an internal call is in progress. End the internal call with and then answer the external call with ...

# Transferring calls/Conference between handsets When an external call is connected;

- 1. Press . Scroll to INTERCOM. Press OK.
- 2. If using more than 2 handsets: Enter call number 1-6 for the desired handset or press 9 for all.
- **3.** To transfer: press **\_\_\_**, For conference: hold **∑** pressed down.

### Register a new handset

All handsets included in the package are already registered to the base unit.

Only for separate handsets/service measures. You can register up to 6 handsets to one base unit.

This model is GAP (Generic Access Profile) compatible, which means that the handset and the base unit can both be used with most other GAP compatible units irrespective of manufacturer. However the GAP protocol cannot guarantee that all functions may be accessed. Extra handsets will not be available as accessories.

- 1. Hold down ≤ on the base for around 6 seconds.
- 2. Press . Scroll to REGISTRATION. Press OK.
- **3.** Enter the base unit's PIN code (e.g. 0000). Press **OK**.
- If the registration is successful the unit will return to standby mode within one minute.

### **Troubleshooting**

Check that the telephone cord is undamaged and properly plugged in. Disconnect any additional equipment, extension cords and other phones. If the problem is resolved, the fault is with some other equipment. Test the equipment on a known working line (e.g. at a neighbour's house). If the equipment works there the fault is probably with your telephone line. Please report this to your network operator.

#### No number shown when ringing

 This function requires a Caller ID subscription from your service provider.

### Warning tone/Not possible to make calls

- The batteries may be running low (charge the handset).
- The hand unit may be nearly out of range. Move closer to a base unit.

#### Telephone does not work

- Check that the adapter/phone cord is connected correctly.
- Check that you have selected Tone Dial, see System Settings.
- Check the charge status of the handset batteries.
- Connect another functioning telephone to the network wall socket.

#### The telephone continues to ring

 Some of the telephone's ringers do not follow the line signal, which means that the signal may continue for up to 8 seconds after answering a call.

If the telephone still does not work, contact the place of purchase for service. Don't forget the receipt or a copy of the invoice.

### Specific Absorption Rate (SAR)

This device meets applicable international safety requirements for exposure to radio waves. This telephone measures 0.05 W/kg (per 10g tissue). The max. limit according to WHO is 2W/kg (per 10g tissue).

### **Declaration of conformity**

Doro hereby declares that the product Arc 3 conforms to the essential requirements and other regulations contained in the directives 1999/5/EC (R&TTE), 2002/95/EC (ROHS). A copy of the manufacturer's declaration is available at <a href="https://www.doro.com/dofc">www.doro.com/dofc</a>

#### Guarantee

This product is guaranteed for a period of 12 months from the date of purchase. If you experience any problems please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period. This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the device during a thunderstorm. Batteries are consumables and are not included in any guarantee. This guarantee does not apply if other batteries than DORO original batteries have been used.

#### UK

If you cannot resolve the fault using the faultfinder section, technical support is available by email: tech@doro-uk.com-premium rate telephone number: 0905 895 0854, calls cost 50 pence per minute (prices correct at the time of publication). You can also contact us in writing (regarding any Spares or Technical query):

Customer Services

Doro UK Ltd

1 High Street

Chalfont St Peter

Buckinghamshire SL9 9OE.

Further contact details are available on our website: www.doro-uk.com.

#### **Australia and New Zealand**

Products permitted for connection to the telephone network are marked with A in Australia and

**TELEPERMIT** in New Zealand. These marks indicate the products comply with the regulations and can be legally connected in the country of purchase.

#### Customer support

AUSTRALIA NEW ZEALAND

DORO Australia Pty Ltd Atlas Gentech (NZ) Limited

PO Box 6760 Private Bag 14927

Baulkham Hills BC NSW 2153 Panmure Australia Auckland New Zealand

Consumer Support Consumer Support Ph: Ph: 1300 885 023 Ph: 0900-500-25 (Toll Call)

Fax: (02) 8853-8489 Fax: (09) 574-2722 support@doro.com.au support@atlasgentech.co.nz

www.doro.com.au

#### Electro Magnetic Radiation (EMR)

This telephone complies with applicable safety requirements for exposure to radio waves. The mean power of this telephone is not greater than 14 mW.

This is below the 20mW limit at which testing is required.

#### REN (RN for New Zealand)

The REN (Ringer Equivalence Number) or (RN) is of significance only if you wish to connect more than 1 telephone to your telephone line. A standard telephone line has a maximum REN capacity of 3 (RN of 5). It is possible to connect 3 devices with a REN of 1 (RN of 1) with no degradation to the product's performance. Exceeding this limit may cause the volume of the ringer in any phone to decrease or not ring at all.

#### ALL PRODUCTS

The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with the minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services. This equipment shall not be set to make automatic calls to the Telecom "111" Emergency Service. This equipment may not provide for the effective hand-over of a call to another device connected to the same line. This equipment should not be used under any circumstances that may constitute a nuisance to other Telecom Customers.

#### **CND PRODUCTS**

If a charge for local calls is unacceptable, the "DIAL" button should NOT be used for local calls. Only the 7 digits of the local number should be dialled from your telephone. DO NOT dial the area code digit or the "0" prefix.

#### Raccordement

- 1. Reliez les câbles du bloc d'alimentation et du téléphone aux prises murales.
- 2. Insérez les batteries en respectant la polarité.
- 3. Placez le combiné sur le chargeur, et charger le 24 heures en continue avant la première utilisation.
- **4.** Appuyez sur (touche de menu gauche).
- 5. Atteignez ▲/▼ REGL. COMB
- **6.** Appuyez sur **OK** (touche de menu gauche).
- 7. Atteignez LANGUE. Appuyez sur OK.
- 8. Atteignez l'option requise. Appuyez sur OK.
- 9. Appuyez deux fois sur nou sur pour repasser en veille.

#### Synchronisation de la touche R

- 10. Appuyez sur 🗐 . Atteignez REGL. BASE. Appuyez sur OK.
- 11. Atteignez **DELAI R**. Appuvez sur **OK**.
- **12.** Vérifiez que le réglage est **MEDIUM**. Appuyez sur **OK**.

#### **Batteries**

Des batteries (1,2V NiMH) neuves et complètement chargées (charge de 10 heures) ont une autonomie d'environ 10 heures en communication et 100 heures en veille. Ces durées sont données pour une utilisation à l'intérieur à des températures normales. Les batteries sont complètement chargées au bout de 4 à 5 charges. Le système de régulation de charge automatique évite de les surcharger et de les endommager par une recharge prolongée. Lorsque que les batteries sont totalement déchargées l'afficheur peut fonctionner qu'après 5 minutes max. de rechargement.

### Témoin de charge

Quand la charge des batteries est faible, s'affiche et le combiné émet un signal sonore en cours d'appel. Veuillez noter que le témoin de charge des batteries clignote tant que le combiné est sur la base, même lorsque les batteries sont complêtement chargées.

### Remarque!

Vous ne pouvez pas obtenir de ligne quand les batteries sont déchargées ou lorsque le combiné est trop éloigné de la base. Ne placez pas la base à proximité d'appareils électriques, d'une source de chaleur ou dans un endroit exposé directement au soleil afin de minimiser les risques d'interférences. Vous pourrez observer un réchauffement de l'appareil pendant la charge; ce phénomène est normal. Utilisez uniquement des batteries d'origine. La garantie ne couvre pas les dommages causés par l'utilisation de mauvaises batteries.

#### Portée

En général, la portée du téléphone varie de 50 à 300 mètres en fonction des conditions ambiantes. Vous pouvez améliorer la portée en tournant la tête de façon à pointer le combiné vers la base. La qualité du son se détériore quand le combiné se rapproche de la limite de sa portée, puis la communication est coupée. Le symbole Y s'affiche quand le téléphone est à portée et

### **Appeler**

- 1. Composez le numéro. Au besoin effacez les erreurs avec la touche de menu C.
- 2. Appuyez sur pour appeler. Appuyez sur pour mettre fin à l'appel.

### Recevoir un appel

1. Attendez que le combiné sonne.

clignote lorsqu'il est hors de portée.

2. Prenez l'appel en appuyant sur . Appuyez sur . pour mettre fin à l'appel.

### Réglage du volume

Vous pouvez ajuster le volume en cours de communication avec les touches de défilement \( \bigset \bigvec \vec{\text{V}} \).

#### Touche Bis

Appuyez sur ♠. Appuyez sur ♠/▼ pour faire défiler les 5 derniers numéros composés. Appuyez sur pour appeler.

#### Touche Secret

Vous pouvez couper ou activer le micro en cours d'appel en appuyant sur C.

### Coupure de sonnerie temporaire

Quand vous recevez un appel, vous pouvez appuyer sur C pour couper la sonnerie du combiné.

#### Recherche du combiné

Le combiné sonne quand on appuie sur la touche ≤ de la base. Le signal s'arrête automatiquement au bout de quelques secondes ou lorsqu'on appuie sur la touche du combiné ou sur la touche de la base.

### Répertoire

Le répertoire peut enregistrer 20 noms/numéros. Lorsque vous êtes abonné à la présentation du numéro, celui de votre correspondant s'affiche à la réception d'un appel (le nom peut également s'afficher pour les numéros sauvegardés dans le répertoire). Vous pouvez choisir différentes mélodies pour les numéros du répertoire.

#### Enregistrement d'un nom/numéro dans le combiné

- 1. Appuyez sur [1]. Appuyez sur [1].
- 2. Atteignez AJOUTER. Appuyez sur OK.
- **3.** Entrez le nom par pressions successives des touches numériques. Appuyez sur **OK**.
- Saisissez le numéro de téléphone ainsi que l'indicatif (C=effacer). Appuyez sur OK.
- 5. Atteignez la mélodie désirée. Appuyez sur OK.

#### Utilisation du répertoire

- Appuyez sur . Faites défiler les entrées avec les touches . V. Vous pouvez aussi effectuer une recherche rapide en appuyant sur la touche numérotée correspondant à la première lettre du nom de la personne.
- Appuyez sur pour appeler ou sur pour afficher les différentes options, par ex. EDITER pour consulter les détails.

#### Présentation du numéro

Le nom du correspondant qui appelle et ceux des 10 derniers appels reçus en absence s'affichent. **NVX APPEL** s'affiche en veille et ★ indique un appel reçu en absence. Cette fonction est disponible sous réserve d'abonnement auprès de votre opérateur!

### Appeler à partir du Journal des appelants

- Appuyez sur . Atteignez l'entrée désirée avec la touche .
- 2. Appuyez sur pour appeler on sur pour afficher les différentes options ( = retour).

Lorsque le nom est affiché, appuyez sur **III** pour visualiser le numéro correspondant.

### Informations supplémentaires

En plus des numéros de téléphone, l'écran peut afficher :

HORS ZONE Numéro inconnu, par ex. un appel de l'étranger.

SECRET L'appel provient d'un numéro masqué.

Aucun numéro ne s'affiche.

Message déposé sur la messagerie de votre opérateur\*.

\*Pour l'effacer: Appuyez sur A puis de façon prolongée sur 4.

#### **Fonctions**

- 1. Appuyez sur . Atteignez REGL. COMB. Appuyez sur OK.
- Atteignez la fonction désirée, par ex. LANGUE. Appuyez sur OK.
- 3. Atteignez l'option requise. Appuyez sur OK.

ALARME Lorsqu'une alarme est activée,

s'affiche en veille. La sonnerie de l'alarme dure 45 secondes. Vous pouvez la couper en appuyant sur n'importe quelle touche. Sil'option **SNOOZE** est activée, l'alarme sonne à nouveau au bout de 7 minutes. Coupez complètement l'alarme dans le menu ou en appuyant quelques secondes sur la touche . Le volume est celui réglé pour la sonnerie.

**SONNERIE** La sonnerie du combiné.

**INT/EXT**= appel interne/externe.

Les mélodies 2 à 5 peuvent se prolonger pendant 8 secondes lorsque l'appel est pris sur un autre téléphone.

**ALERTES SON.** Bip des touches, avertissement sonore:

batteries faibles et hors de portée.

LANGUE Voir la section Raccordement.

RENOMMER CB Personnalisation du texte affiché en

veille.

**AFFICHAGE** Permet de choisir entre l'heure & le

nom du combiné en veille.

RÉP. AUTO ON/OFF Décrochage automatique lorsque

combiné est retiré de la base.

**DATE & HEURE** Réglage de la date et de l'heure

### Configuration du système

Le code du système est 0000 à la livraison.

- Appuyez sur . Atteignez REGL. BASE. Appuyez sur OK.
- **2.** Atteignez la fonction désirée. Appuyez sur **OK**.
- 3. Entrez l'option requise. Appuyez sur OK.

ANNULER COMB Pour annuler l'appairage d'un combiné NUMEROTATION Pour la France, sélectionnez le mode

fréquences vocales.

**DÉLAI R MEDIUM** = France/Portugal

**COURT** = autres pays

**MODIFIER PIN** Pour changer le code (par ex. 0000).

### Système élargi (Packs)

Le numéro attribué au combiné pour les appels internes est affiché en mode veille. Placez la base à distance égale des combinés pour une portée répartie sur la zone à couvrir.

#### Intercom

- 1. Appuyez sur = (touche de menu droite).
- Si vous utilisez plus de 2 combinés: composez le numéro du combiné voulu 1-6 ou appuyez sur pour appeler l'ensemble des combinés.

Si vous recevez un appel de l'extérieur pendant un appel interne, le combiné émet un bip sonore. Mettez fin à l'appel interne en appuyant sur puis prenez l'appel extérieur en appuyant sur ...

### Transfert d'appel/Conférence entre combinés

- Vous êtes en communication avec un correspondant de l'extérieur.
- 2. Appuyez sur . Atteignez INTERCOM. Appuyez sur OK.
- Si vous utilisez plus de 2 combinés: composez le numéro du combiné voulu 1-6 ou appuyez sur 9 pour appeler l'ensemble des combinés.

#### Déclaration d'un nouveau combiné

Tous les combinés livrés avec la base sont déclarés sur celle-ci. Cette opération n'est nécessaire que pour les nouveaux combinés. Vous pouvez utiliser (déclarer) jusqu'à 6 combinés par base. Les combinés supplémentaires ne seront pas disponibles en tant qu'accessoires.

Néanmoins ces modèles sont compatibles GAP (Generic Access Profile) c'est-à-dire qu'ils peuvent fonctionner avec des bases ou mobiles d'autres marques (GAP eux-mêmes). Toutefois cette compatibilité peut se limiter à certaines fonctions. La procédure décrite ci-dessous vous permettra de redéclarer un combiné dans le cas où celui-ci perdrait son appairage. Veillez à ne poser aucun combiné sur la base pendant la déclaration.

- Appuyez sur la touche 

  de la base pendant environ 6 secondes.
- 2. Appuyez sur . Atteignez ASSOCIATION. Appuyez sur OK.
- Entrez le code secret de la base (0000 à la livraison). Appuyez sur OK.
- Si la déclaration du combiné est réussie, le combiné repasse en veille dans la minute qui suit.

### En cas de problèmes

Vérifiez que le câble téléphonique soit en bon état et qu'il soit branché correctement. Débranchez tout autre matériel, rallonges et téléphones. Si l'appareil fonctionne alors normalement, la panne est causée par le matériel additionnel. Testez le matériel sur une ligne en état de marche (chez un voisin par ex.). Si le matériel fonctionne sur ce raccordement, votre propre ligne téléphonique est défectueuse. Signalez la panne à votre opérateur.

# Pas de présentation du numéro à réception d'un appel

 Cette fonction de présentation du numéro est disponible sous réserve d'abonnement auprès de votre opérateur.

#### Bip sonore en cours de communication/ Impossible d'appeler

- Vérifiez le niveau de charge des batteries et rechargez les si besoin.
- Le combiné est en limite de sa portée. Rapprochezvous de la base.

### Le téléphone ne fonctionne pas

- Vérifiez le branchement de l'adaptateur et du cordon téléphonique.
- Vérifiez que le mode de numérotation FREQ. VOCALE est sélectionné, voir Configuration du système.
- Vérifiez le niveau de charge des batteries du combiné.
- Raccordez un téléphone en état de marche à la prise téléphonique murale.

#### Le téléphone continue à sonner

 La sonnerie de certains combinés peut varier par rapport à celle de la ligne téléphonique; certains combinés peuvent continuer à sonner pendant 8 secondes après que l'appel ait été pris.

Si le téléphone ne fonctionne toujours pas, contactez votre revendeur. N'oubliez pas de vous munir du ticket de caisse ou d'une copie de la facture.

#### Déclaration de conformité

Doro certifie que cet appareil Doro Arc 3 est compatible avec l'essentiel des spécifications requises et autres points des directives 1999/5/EC (R&TTE) et 2002/95/EC (ROHS). La déclaration de conformité peut être consultée à l'adresse suivante: <a href="www.doro.com/dofc">www.doro.com/dofc</a>

#### Garantie et S.A.V.

#### Pour la France

Cet appareil est garanti deux ans à partir de sa date d'achat, la facture faisant foi. En cas de problèmes, contactez votre revendeur. La réparation dans le cadre de cette garantie sera effectuée gratuitement.

La garantie est valable pour un usage normal de l'appareil tel qu'il est défini dans la notice d'utilisation. Les fournitures utilisées avec l'appareil ne sont pas couvertes par la garantie. Sont exclues de cette garantie les détériorations dues à une cause étrangère à l'appareil. Les dommages dus à des manipulations ou à un emploi non conformes, à un montage ou entreposage dans de mauvaises conditions, à un branchement ou une installation non-conformes ne sont pas pris en charge par la garantie. Par ailleurs, la garantie ne s'appliquera pas si l'appareil a été endommagé à la suite d'un choc ou d'une chute, d'une fausse manœuvre, d'un branchement non-conforme aux instructions mentionnées dans la notice, de l'effet de la foudre, de surtensions électriques ou électrostatiques, d'une protection insuffisante contre l'humidité, la chaleur ou le gel. En tout état de cause, la garantie légale pour vices cachés s'appliquera conformément aux articles 1641 et suivants du Code Civil. Si vous souhaitez obtenir de l'aide lors de l'installation ou poser une question technique sur le produit, contactez notre Service d'Assistance Téléphonique au 08 92 68 90 18 ( No Audiotel - 0,34€ /min.) Il est recommandé de débrancher l'appareil en cas d'orage. En tant que consommables, les piles sont exclues de la garantie.

Cette garantie ne s'applique pas en cas d'utilisation de piles autres que des piles DORO originales.

### DAS (Débit d'Absorption Spécifique)

Cet appareil est conforme aux normes de sécurité concernant l'exposition aux fréquences radioélectriques. La valeur enregistrée pour ce téléphone est de 0,05 W/kg (mesurée sur un tissu de 10g). La limite applicable aux téléphones portables utilisés par le public fixée par l'OMS est de 2 W/kg en moyenne sur un tissu de dix grammes.

English French

Version 1.6

